

875750 HDMI 4K Matrix 6x6

User Manual



Thank you for purchasing this product. For optimum performance and safety, please read these instructions carefully before connecting, operating or adjusting this product. Please keep this manual for future reference.

SURGE PROTECTION DEVICE RECOMMENDED

This product contains sensitive electrical components that may be damaged by electrical spikes, surges, electric shock, lightning strikes, etc. Use of surge protection systems is highly recommended in order to protect and extend the life of your equipment.

Table of Contents

1. Introduction.....	4
2. Features.....	4
3. Panel Descriptions.....	5
4. Remote Control Descriptions.....	6
5. Application Diagram.....	7
6. Specifications.....	8
7. Package Contents.....	8
8. RS-232 Pin Assignment and Commands.....	9
9. GUI Control.....	11
10. Maintenance.....	22
11. Warranty Policy.....	22
12. Limitations of Warranty.....	22
13. Exclusive Remedies.....	23
14. RMA Policy.....	23

Introduction:


The 875750 HDMI 4K Matrix 6x6 routes six Hi-Def sources to any six HDTV displays, supporting 1080p Full HD up to 4K plus all 3D formats, along with multichannel digital audio formats such as Dolby® True HD and DTS-HD® Master Audio™. Each source can be routed to any display using the front-panel push buttons, IR remote control, RS-232 interface, or via TCP/IP.

Features:

- Supports resolutions up to 1080p@60HZ, 48-bit deep color, 4k@30HZ
- Allows any source to be displayed on multiple displays at the same time
- Allows any HDMI display to view any HDMI source at any time
- Dolby TrueHD and DTS-HD master audio pass through HDMI output
- Advanced EDID management for rapid integration of sources and displays
- Multiple switching mode, push-in button, IR remote control, RS-232 control, and TCP/IP control
- Easy installation with rack-mounting ears
- Full 3D pass through.
- HDCP compliant


Panel Descriptions

Front Panel

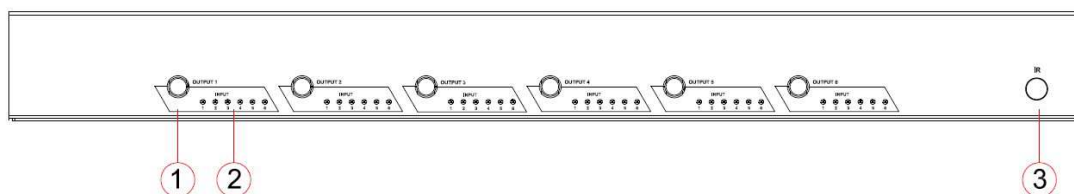


1. HDMI output selection button 1 to 6---Press to select the output from 1 to 6.
2. Source LED indicator---lit when selected by the output
3. IR receiver window----Receive the IR from the remote control of the Matrix.

Back Panel

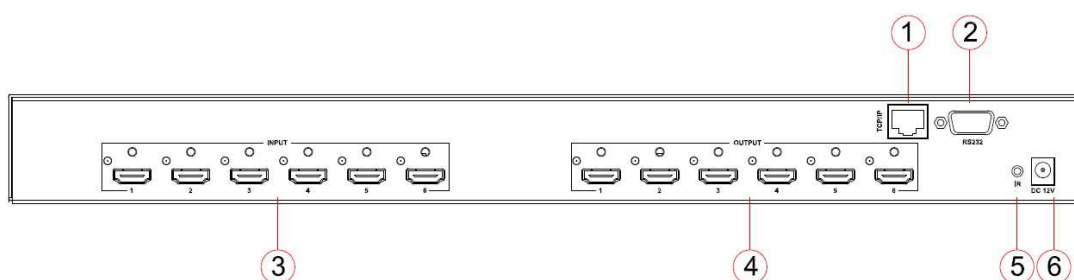

1. RJ45 ----TCP/IP control
2. RS232 port----Connect to this port for control from a computer
3. HDMI inputs 1 to 6----Connect HDMI sources
4. HDMI outputs 1 to 6----Output for displays, AVR etc.
5. IR extension receiver input ---- 3.5mm stereo phone-jack
6. Power port---Use included DC adaptor to power the matrix switcher.

Remote control descriptions

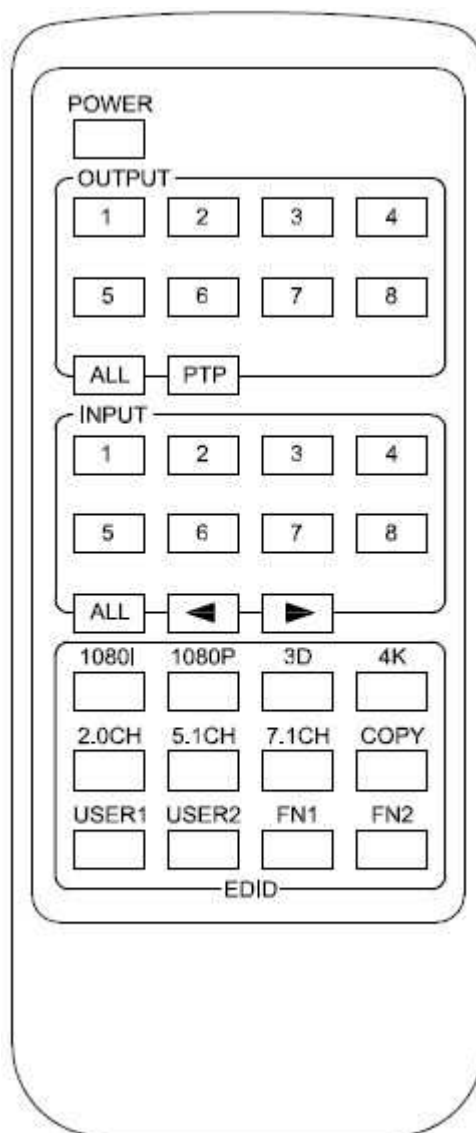

Output and Input select

A. OUTPUT-X select INPUT-Y:

1. Press OUTPUT-X (X means 1 to 8 of outputs) → Press INPUT-Y (Y means 1 to 8 of inputs)
2. Press OUTPUT-X (X means 1 to 8 of outputs) → press the left and right arrow buttons to select the input.

B. All outputs select INPUT-Y: Press ALL button in zone

OUTPUT → Press INPUT-Y button (Y means 1 to 8 of inputs), then INPUT-Y switched to ALL OUTPUTS

C. Mirror all inputs and outputs (Ex. Input 1 to output 1, input 2 to output 2, etc): Press PTP button in Zone OUTPUT

EDID Set Up


- A. Fixed EDID to INPUT-Y/ALL
Press 1080I/1080P/3D/4K → Press 2.0CH/5.1CH/7.1CH →
INPUT-Y/ALL button in Zone INPUT
- B. Copy EDID of OUTPUT-X to INPUT-Y/ALL
Press COPY button → Press OUTPUT-X button → Press INPUT-Y/ALL
button
- C. User defined EDID to INPUT-Y/ALL
Press USER1/USER2 button → Press INPUT-Y/ALL
- NOTE: Pressing button sequence should be finished in 5 seconds,
otherwise, operation discarded.

Manual Output and Input select

First Press: OUTPUT select, output button 1 to 6

Second Press: INPUT select, output button 1 to 6

Application Diagram

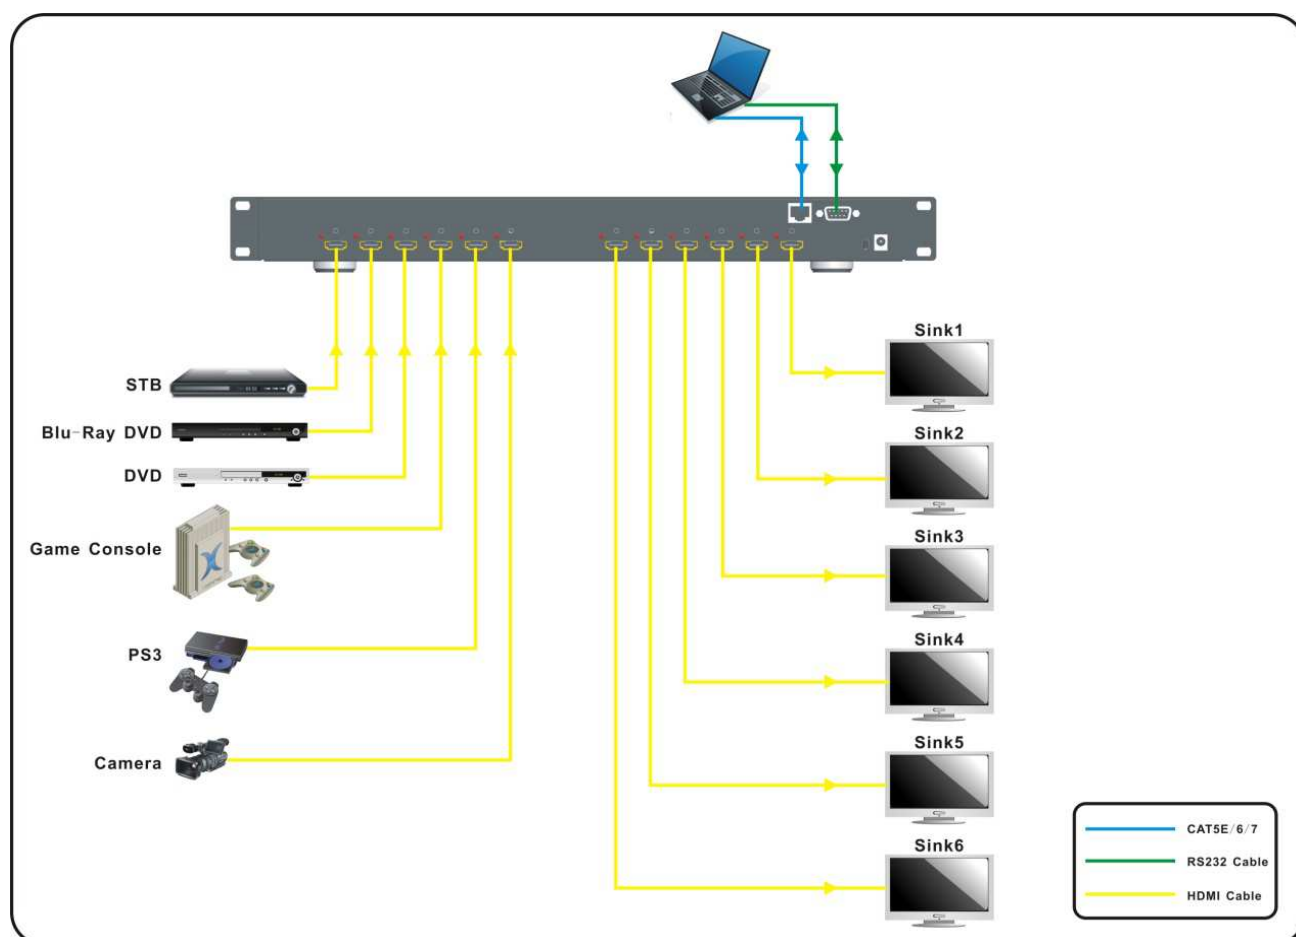

Specifications:

Bandwidth:	2.97Gbps per color
Video Input Connectors:	6x HDMI Type A, 19-pin, female, locking
Video Output Connectors:	6x HDMI Type A, 19-pin, female, locking
RS-232 serial port:	DB-9, female
TCP/IP Control:	RJ-45, female
IR Input ports:	1x 3.5mm stereo jack
Rack-Mountable:	1 U rack height, rack ears included
Dimensions (W x H x D):	428mm x 245mm x 43mm , without feet
Shipping Weight:	2.7kg
Operating Temperature:	32°F to 104°F (0°C to 40°C)
Storage Temperature :	-4°F to 140°F (-20°C to 60°C)
Power Supply:	12V/5A DC

Package Contents:

1. 1x 875750
2. 1x 12V DC power supply
3. 1x Remote control
4. 1x IR Receiver.
5. 1x mounting kit.

RS-232 Pin Assignment

MT0606-140			Remote Control Console	
PIN	Assignment		PIN	Assignment
1	NC		1	NC
2	Tx		2	Rx
3	Rx		3	Tx
4	NC		4	NC
5	GND		5	GND
6	NC		6	NC
7	NC		7	NC
8	NC		8	NC
9	NC		9	NC

Baud rate 57600,8,n,1

RS232 and Telnet Commands

No.	Command	Action
0	?	Print Help Information
1	HELP	Print Help Information
2	STATUS	Print System Status And Port Status
3	PON	Power On, System Run On Normal State
4	POFF	Power Off, System Run On Power Save State
5	IR ON/OFF	Set System IR Control On Or Off (Only for IR Extension)
6	KEY ON/OFF	Set System KEY Control On Or Off
7	DBG ON/OFF	Set Debug Mode On Or Off
8	BEEP ON/OFF	Set Onboard Beep On Or Off
9	LCD ON/OFF	Set LCD Always On Or Auto Turn Off When Power On
10	RESET	Reset System To Default Setting, Should Type 'Yes' To Confirm, 'No' To Discard
11	OUT xx ON/OFF	Set OUTPUT:xx On Or Off

12	OUT xx FR yy	Set OUTPUT:xx From INPUT:yy
14	EDID xx CPyy	Set Input:xx EDID Copy From Output:yy
15	EDID xx DF zz	Set Input:xx EDID To Default EDID:zz xx=00: Select All INPUT Port xx=[01...04]: Select One INPUT Port yy=[01...04]: Select One OUTPUT Port zz=00: HDMI 1080p@60Hz, Audio 2CH PCM zz=01: HDMI 1080p@60Hz, Audio 5.1CH PCM/DTS/DOLBY zz=02: HDMI 1080p@60Hz, Audio 7.1CH PCM/DTS/DOLBY/HD zz=03: HDMI 1080i@60Hz, Audio 2CH PCM zz=04: HDMI 1080i@60Hz, Audio 5.1CH PCM/DTS/DOLBY zz=05: HDMI 1080i@60Hz, Audio 7.1CH PCM/DTS/DOLBY/HD zz=06: HDMI 1080p@60Hz/3D, Audio 2CH PCM zz=07: HDMI 1080p@60Hz/3D, Audio 5.1CH PCM/DTS/DOLBY zz=08: HDMI 1080p@60Hz/3D, Audio 7.1CH PCM/DTS/DOLBY/HD zz=09: HDMI 4K2K, Audio 2CH PCM zz=10: HDMI 4K2K, Audio 5.1CH PCM/DTS/DOLBY zz=11: HDMI 4K2K, Audio 7.1CH PCM/DTS/DOLBY/HD zz=12: DVI 1280x1024@60Hz, Audio None zz=13: DVI 1920x1080@60Hz, Audio None zz=14: DVI 1920x1200@60Hz, Audio None zz=15: User EDID 1 zz=16: User EDID 2 zz=17: GUI Download EDID
18	NET DHCP ON/OFF	Set Auto IP(DHCP) ON Or OFF
19	NET IP xxx.xxx.xxx.xxx	Set IP Address
20	NET GW xxx.xxx.xxx.xxx	Set Gateway Address
21	NET SM xxx.xxx.xxx.xxx	Set Subnet Mask Address
22	NET RB	Set Network Reboot and Apply New Config!!!

GUI Control

PC System: Microsoft Windows Operation System

Installation


6x6 HDMI Matrix controller is a green software. You just need to copy "6x6 HDMI Matrix Controller vx.x.exe" to the PC which is used to control the Matrix by RS232 COM or TCP to complete installation.

Preparation


1. Connect PC and Matrix by RS232 cable or UTP cable
2. Power up Matrix (It will take about 5 seconds to be ready with "Di" beep sound)
3. Double click "6x6 HDMI Matrix Controller vx.x.exe" icon to run it

How to control Matrix

Common information




Click to select tab page



1. COM port or TCP connect status
2. Control command process status
3. Prompt message display area
4. Date and Time display

“General” page

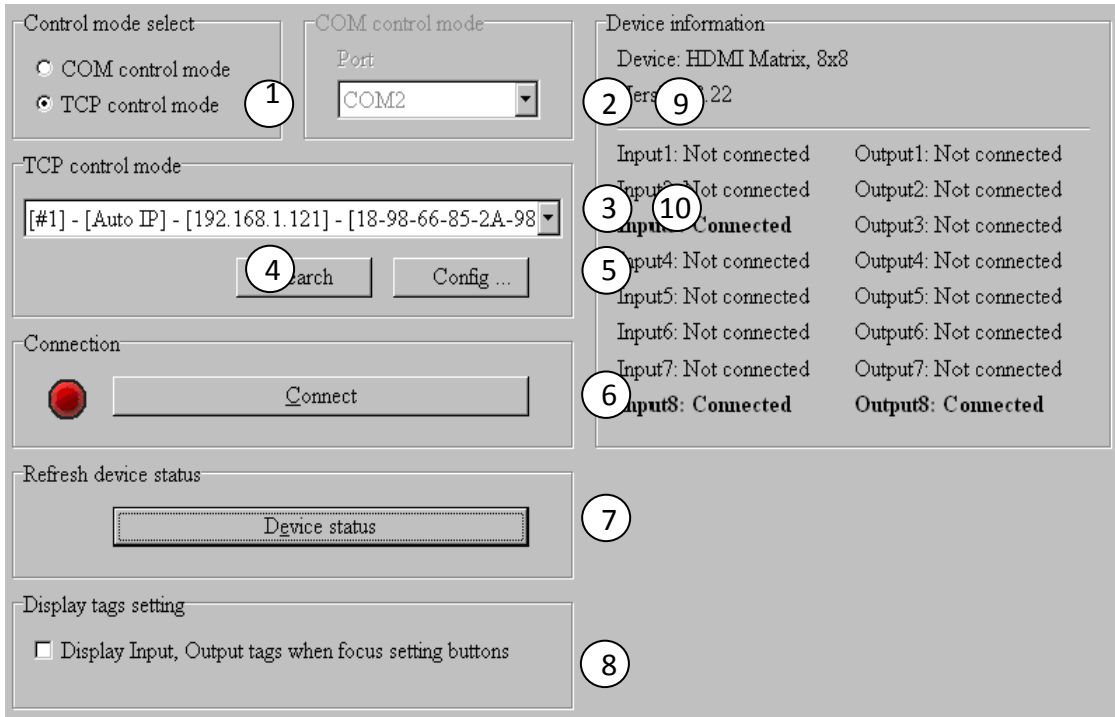

1. Select control mode: RS232 COM mode (Auto COM ports detected) or TCP mode
2. List detected COM ports
3. List all Matrix devices after search operation
4. Click to search all Matrix devices that connected in same subnet
5. Click to configuration the selected Matrix's TCP control configurations
6. Click to connect or disconnect PC and Matrix (Connection will be established automatically before control commands sending)
7. Click to refresh device status: include device information displayed in ⑨ area and Input/output port connection status in ⑩ area.

NOTE: Tab pages cannot be changed during control command is processing.

8. To enable or disable Input/output tags displaying when setting buttons on “Setting” page focused
9. Device information display area
10. Input/output port connection status


Set TCP control configuration

Click Config button to show TCP configuration window.



- ① Set tag to identify Matrix device
- ② Set IP mode: Subnet should support DHCP protocol when set Auto IP mode, then Matrix device will obtain IP automatically. Otherwise, set Static IP mode and designate a useable IP for Matrix device.
- ③ Set IP address, not editable when Auto IP mode selected. Note: The last IP BYTE's range is 2-252.
- ④ Matrix device MAC address
- ⑤ Click OK to set configuration. If configuration is set OK, Matrix devices will be searched out again
- ⑥ Click to Close the window and configuration cancelled

“Port Tag” page

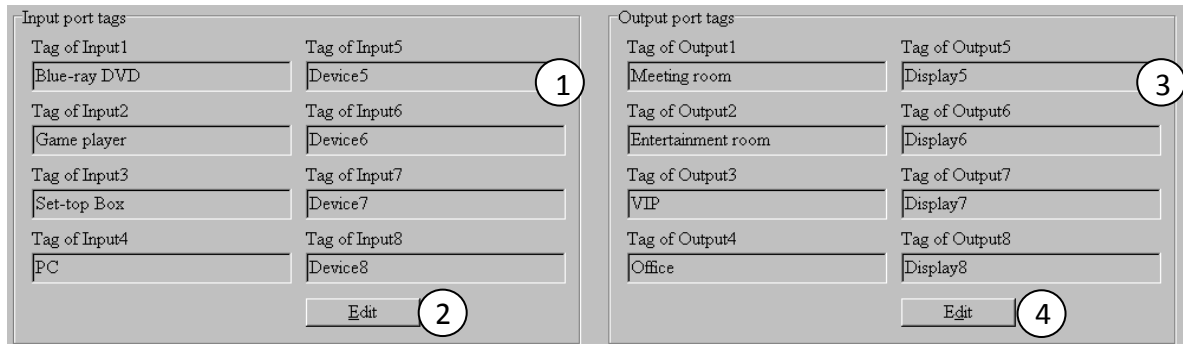

The screenshot shows two panels: 'Input port tags' and 'Output port tags'. Each panel has a table of tags and an 'Edit' button. Callout 1 points to the 'Tag of Input5' field, callout 2 points to the 'Edit' button for input tags, callout 3 points to the 'Tag of Output5' field, and callout 4 points to the 'Edit' button for output tags.

Input port tags		Output port tags	
Tag of Input1	Tag of Input5	Tag of Output1	Tag of Output5
Blue-ray DVD	Device5	Meeting room	Display5
Tag of Input2	Tag of Input6	Tag of Output2	Tag of Output6
Game player	Device6	Entertainment room	Display6
Tag of Input3	Tag of Input7	Tag of Output3	Tag of Output7
Set-top Box	Device7	VIP	Display7
Tag of Input4	Tag of Input8	Tag of Output4	Tag of Output8
PC	Device8	Office	Display8
Edit		Edit	

- ① Input port tags
- ② Click to edit Input port tags
- ③ Output port tags
- ④ Click to edit Output port tags


NOTE: Edit boxes are read only, click “Edit” button to pop up window to edit the tags.

One set of Input/output port tags can be set for Matrix device when COM control mode selected.

Input/output port tags can be set for respective Matrix device according to device’s MAC address.

Edit Input port tags

After action of ②, edit form will pop-up as below:

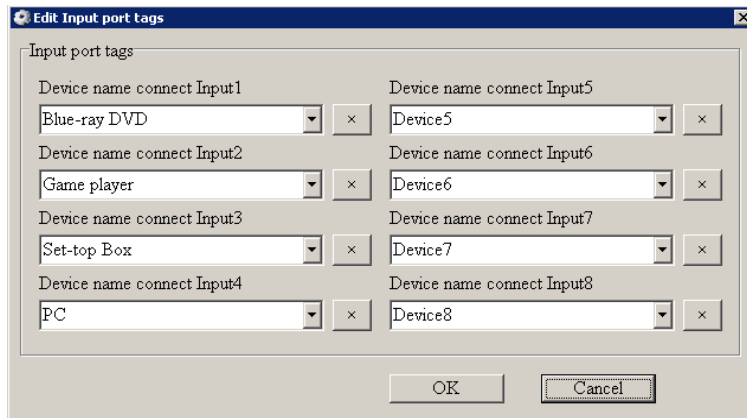


Define tags for respective Input port, then devices connect the Input ports can be easily remembered.

Click buttons with “x” caption to delete tag which is no use any more, if tag is still used by any other Input port, delete action will be discarded.

Edit Output port tags


After action of ④, edit form will pop-up as below:

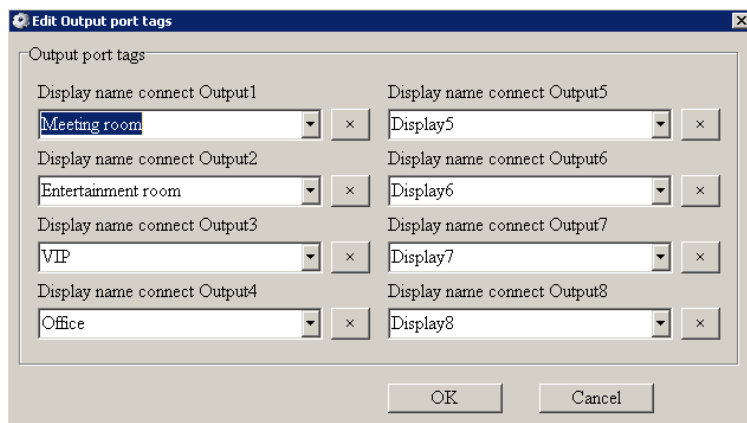

Define tags for respective Output port, then displays connect the Output ports can be easily remembered.

Click buttons with “x” caption to delete tag which is no use any more, if tag is still used by any other Output port, delete action will be discarded.

“Setting” page

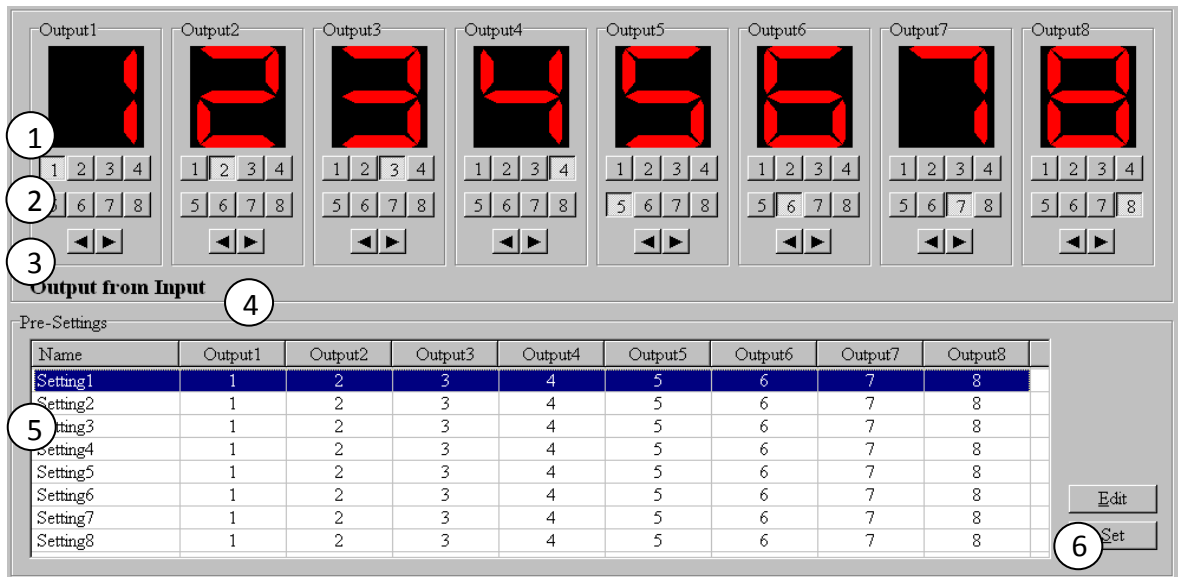


1. LED which displays Input number for respective Output port
2. Click to select Input port for respective Output port
3. Click to select previous or next Input port for respective Output port
4. Display Output from Input with tag information when mouse moves over ② buttons
5. Pre-Setting items: Default is Port to Port
6. Click to edit selected pre-setting item
7. Set selected pre-setting item to Matrix

NOTE: When Change to this “Setting” page, software will try to refresh source selection status of Output port.


Pop-up tag messages

When “Display Input, Output tags when focus setting buttons” checkbox on “General” page is checked and Input/output port tag has been defined, tag messages will pop up like as:

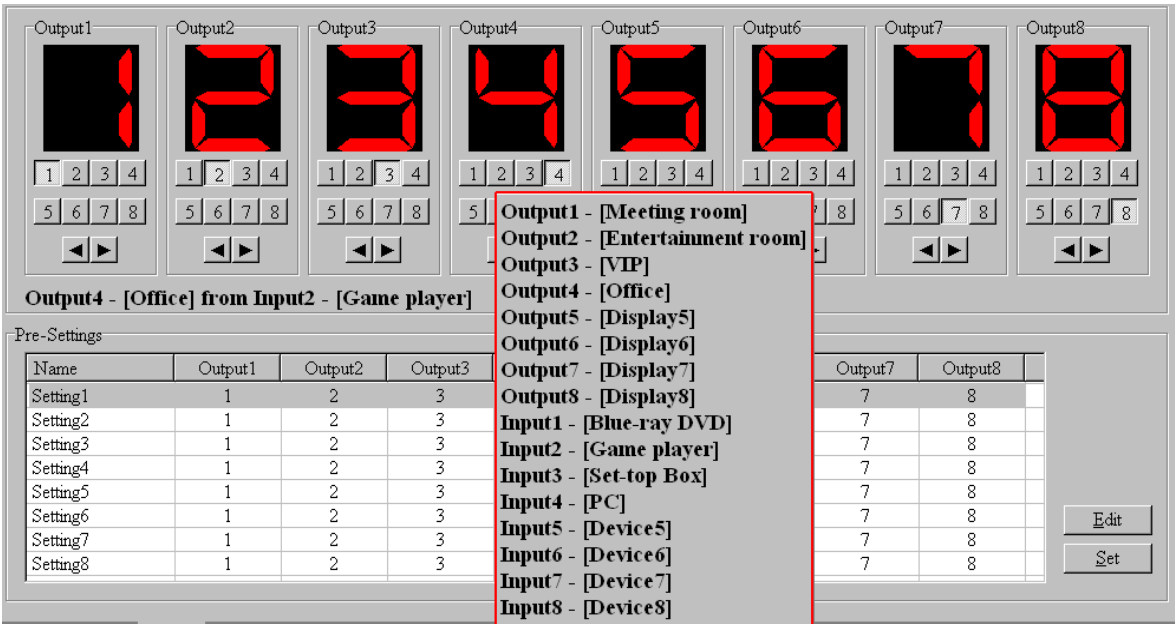

Pop-up Menu

When mouse moves over ② setting buttons, and click mouse right button, menu will pop up like as:

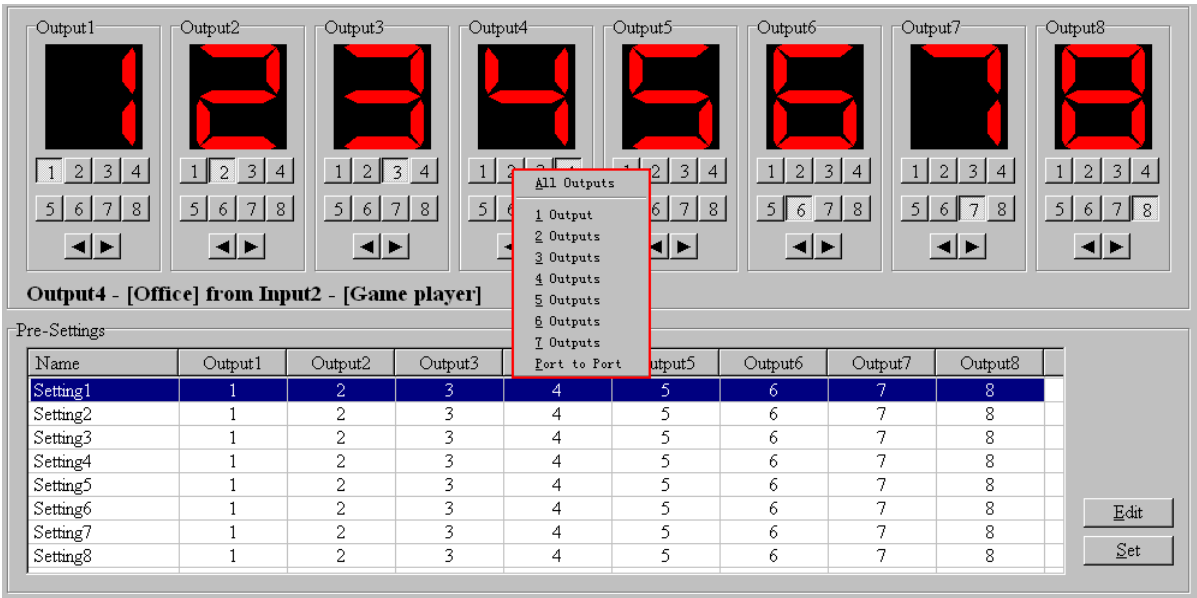

All Outputs: All Outputs from same Input

“1 Output” to “7 Outputs”: Set current Output (where mouse right clicked) and the next x-1 (x range is from 1 to 7, set total x Outputs at the same time) Output(s) from same Input

Port to Port: Output1 from Input1, Output2 from Input2, Output3 from Input3, etc.

Edit selected pre-setting item

After action of ⑥, edit form will pop-up as below:

Output setting

Setting name: Setting1 (1)

All Outputs from: Select Input (2)

Out1 - [Meeting room] from In1 - [Blue-ray DVD] (3)

Out2 - [Entertainment room] from In3 - [Set-top Box]

Out3 - [VIP] from In5 - [Device5]

Out4 - [Office] from In4 - [PC]

Out5 - [Display5] from In2 - [Game player]

Out6 - [Display6] from In5 - [Device5]

Out7 - [Display7] from In5 - [Device5]

Out8 - [Display8] from In7 - [Device7]

OK Cancel

1. Pre-Setting name
2. Set all Output ports from same Input
3. Select Input for respective Output

“EDID control” page

The screenshot shows the 'EDID control' page with the following components:

- EDID mode control:**
 - Set EDID mode: A dropdown menu labeled 'Select EDID' followed by 'to Select Input' and a 'Set' button (labeled 1).
 - Copy EDID from: A dropdown menu labeled 'Select Output' followed by 'to Select Input' and a 'Copy' button (labeled 2).
- EDID data control:**
 - Read EDID data from: A dropdown menu labeled 'Select Output' followed by a 'Read' button (labeled 3).
 - Save to EDID file: A text input field followed by a save icon (labeled 4).
 - Open EDID file: A text input field followed by an open icon (labeled 5).
 - Download EDID data to: A dropdown menu labeled 'Select Input' followed by a 'Download' button (labeled 6).
- EDID content:**
 - A grid with columns 0-15 (0-9, A-F) and rows 00-FF. The cell at row 00, column 0 is highlighted in blue (labeled 7).
 - A 'Clear' button at the bottom right (labeled 8).

1. Set EDID mode for selected Input port or All Input ports, click “Set” button to complete action.


NOTE: When set User1/User2 EDID mode, should Download EDID content to User1 Memory/User2 Memory first. User1/User2 default EDID content is 1080p, Stereo Audio 2.0.

2. Copy EDID from Output port to selected Input port or All Input ports, click “Copy” button to complete action.
3. Read EDID content from Output port and display in grid, click “Read” button to complete action.
4. Save EDID content which displayed in grid to binary file (file extension is “.bin”)
5. Open EDID binary file and display in grid
6. Download EDID content which displayed in grid to selected Input port or All Input ports, click “Download” button to complete action. When User1 Memory/User2 Memory selected, download EDID content to respective memory then User1/User2 EDID mode can be set.
7. EDID content displaying grid

NOTE: EDID content displayed in grid is read only.


8. Click to clear EDID content displayed in grid

“IR Configuration” page

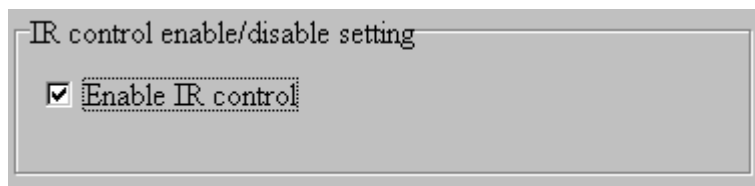

To enable or disable IR control function. When box checked, IR control function enabled, otherwise, IR control function disabled. This setting is not memorized. IR control function is always enabled after power up.

“FW upgrade” page

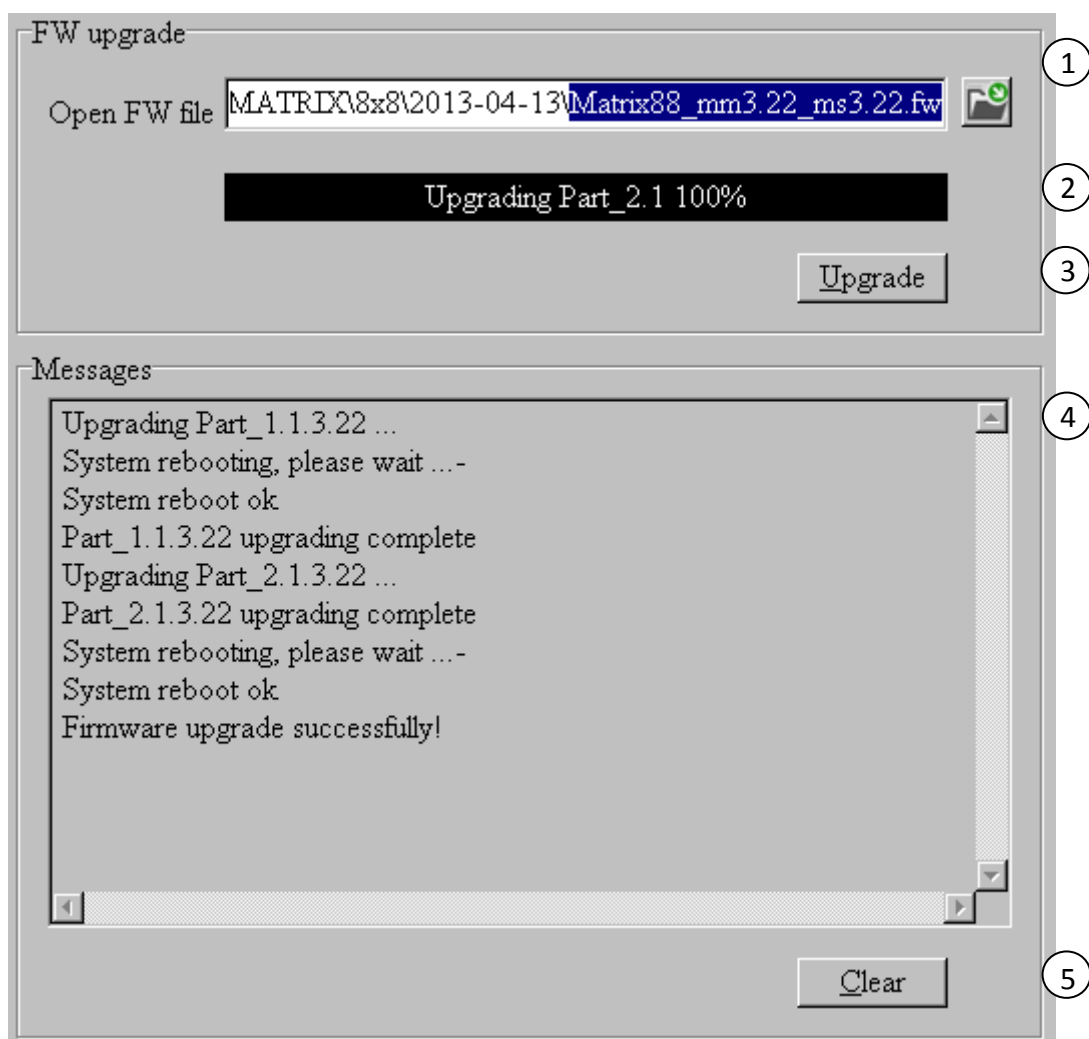

1. Click to open firmware file (file extension is “.fw”).
2. Firmware upgrade progress
3. Click the button to upgrade firmware.

NOTE: If failure occurs during upgrading firmware process, the following steps SHOULD be done sequentially to establish next upgrading procedure:

1. Power down the Matrix
2. Close the 8x8 HDMI Matrix Controller
3. Re-power up the Matrix, then wait for 10 seconds to ensure the Matrix is ready
4. Run 8x8 HDMI Matrix Controller, open firmware file and upgrade again
4. Firmware upgrading messages display
5. Click to clear the messages displayed in the memo box.

Maintenance

Clean this unit with a soft, dry cloth. Never use alcohol, paint thinner or benzene to clean this unit.

Warranty Policy

TLS electronics GmbH products are warranted against defects in material and workmanship for two years from the date of shipment. During the warranty period, TLS will, at its option, repair or replace products that prove to be defective. Repairs are warranted for the remainder of the original warranty or a 90 day extended warranty, whichever is longer.

For equipment under warranty, the owner is responsible for freight to TLS electronics GmbH and all related customs, taxes, tariffs, insurance, etc. TLS is responsible for the freight charges only for return of the equipment from the factory to the owner. TLS will return the equipment by the same method (i.e., Air, Express, Surface) as the equipment was sent to TLS.

All equipment returned for warranty repair must have a valid RMA number issued prior to return and be marked clearly on the return packaging. TLS electronics GmbH strongly recommends all equipment be returned in its original packaging.

TLS electronics GmbH's obligations under this warranty are limited to repair or replacement of failed parts, and the return shipment to the buyer of the repaired or replaced parts.

Limitations of Warranty

The warranty does not apply to any part of a product that has been installed, altered, repaired, or misused in any way that, in the opinion of TLS electronics GmbH, would affect the reliability or detracts from the performance of any part of the product, or is damaged as the result of use in a way or with equipment that had not been previously approved by TLS.

The warranty does not apply to any product or parts thereof where the serial number or the serial number of any of its parts has been altered, defaced, or removed.

The warranty does not cover damage or loss incurred in transportation of the product.

The warranty does not cover replacement or repair necessitated by loss or damage from any cause beyond the control of TLS electronics GmbH, such as lightning or other natural and weather related events or wartime environments.

The warranty does not cover any labor involved in the removal and or reinstallation of warranted equipment or parts on site, or any labor required to diagnose the necessity for repair or replacement.

The warranty excludes any responsibility by TLS electronics GmbH for incidental or consequential damages arising from the use of the equipment or products, or for any inability to use them either separate from or in combination with any other equipment or products.

A fixed charge established for each product will be imposed for all equipment returned for warranty repair where TLS electronics GmbH cannot identify the cause of the reported failure.

Exclusive Remedies

TLS's warranty, as stated is in lieu of all other warranties, expressed, implied, or statutory, including those of merchantability and fitness for a particular purpose. The buyer shall pass on to any purchaser, lessee, or other user of TLS electronics GmbH's products, the aforementioned warranty, and shall indemnify and hold harmless TLS from any claims or liability of such purchaser, lessee, or user based upon allegations that the buyer, its agents, or employees have made additional warranties or representations as to product preference or use.

The remedies provided herein are the buyer's sole and exclusive remedies. TLS electronics GmbH shall not be liable for any direct, indirect, special, incidental, or consequential damages, whether based on contract, tort, or any other legal theory.

RMA Policy

When returning product to TLS for any reason, the customer should fill out the official RMA form to obtain a RMA number. Without the permission or approval, TLS will be no responsible for any return.

This can be initiated by emailing or calling your related sales.

All requests are processed within 48 hours.

Standard Replacement

For customers that agree to return defective product to TLS electronics GmbH first, a Standard Replacement option is available.

An RMA number must first be issued by sales. This RMA number will need to be referenced on the outside of the return shipment.

Upon receipt of the defective product, TLS electronics GmbH will, at its discretion, either repair or replace the product and ship it out in the most expeditious manner possible. Subject to availability, the replacement product will be shipped on the business day following receipt of the defective product.

In the event the product returned to TLS has been discontinued (i.e. the product is no longer being manufactured by TLS electronics GmbH but is still under warranty), TLS will, at its discretion, either repair or replace with recertified product.

Once you have obtained an RMA number

After obtaining an RMA number from TLS electronics GmbH, you must send the product - freight prepaid - to TLS. The TLS RMA number must be prominently displayed on the outside of your package. If you send your product to TLS the RMA number prominently displayed on the outside of the package, it will be returned to you unopened.

Please use a shipping company that can demonstrate proof of delivery. TLS electronics GmbH does not accept responsibility for any lost shipments unless proof of delivery to TLS is provided.

Please note:

Product shipped to TLS must be properly packaged to prevent loss or damage in transit.

Shipping your RMA to TLS electronics GmbH using regular mailing envelopes is not acceptable, as they do not protect the product from damage during shipping.

TLS will not repair or replace a module that is shipped in such a way that the product is not properly protected.

TLS will not accept any product that has been damaged as a result of accident, abuse, misuse, natural or personal disaster, or any unauthorized disassemble, repair or modification.